

GO-KEY

DESCRIPTION

A wireless 4 channel keypad for use with any of the MOTION range of 868 MHz receivers and control panels

INSTALLATION

Fix the back box in position, install 2 x AAA alkaline batteries into the keypad battery holder, fit the keypad to the back box ensuring the rubber sealing gasket is between the back box and keypad and secure using the screws provided

MASTER CODE PROGRAMMING

The default master code is 12345678 if you wish to change this follow the instructions below

Press the * button for 3 seconds until the LED indicator flashes red slowly

Enter the default master code 12345678 and press OK, the LED flashes red quickly, press the * button

Enter the new master code and press the * key, the LED flashes green, enter the master code again and press the * button, the LED will light green for 2 seconds and then switch off, the new master code has been stored

If an error has been made when entering the new master code for the second time the LED will flash red

Note: Keep a record of the new master code as the access codes cannot be programmed without it.

NEW MASTERCODE =

PROGRAMMING AN ACCESS CODE

Press the * button for 3 seconds until the LED indicator flashes red slowly

Enter the master code and press OK, the LED flashes red quickly, press the * button

Enter the access code (from 1 to 8 numbers) followed by the channel (from 1 to 4) and press OK (the last digit is always the channel number), the LED will light green for 2 seconds and then switch off, the access code has been stored

The same code cannot be used on more than one channel

OPERATING

NOTE: The keypad goes into battery saving mode (sleep) after 20 seconds if no key is pressed, the keypad needs to be 'woken up' before entering the code, press the OK button to wake up the keypad before entering the access code

Enter the access code and press OK, the LED will light green

If the access code is entered incorrectly the LED will flash red

If, while entering the code, a key is pressed by mistake, press the OK button or wait 20 seconds before re-entering the code

PROGRAMMING THE GO-KEY INTO THE RECEIVERS MEMORY

NOTE: The keypad goes into battery saving mode (sleep) after 20 seconds if no key is pressed, the keypad needs to be 'woken up' before entering the code, press the OK button to wake up the keypad before entering the access code

Press the programming button marked PROG on the receiver or control panel for 1 second, an audible signal will be heard, release the PROG button, the receiver is now in programming mode, enter the access code on the keypad and press OK, the receiver will give an audible signal confirming it has learned the code.

BATTERY LOW INDICATION

After entering an access code the LED will flash several times to indicate that the batteries need replacing

Quantek Systems Ltd

GO-KEY 0809